


# Modifry® Cup Holder Bracket Installation Years 2006 - 2009


## Bracket Installation

1. Remove the elastic net from the 2 retaining buttons, then remove the buttons using a Philips screw driver.
2. Position bracket over screw holes and hold in place with one hand.
3. With your other hand place one retaining button in the bottom bracket hole and tighten the screw part-way.
4. Position the other retaining button in the top bracket hole and screw in firmly but do not over-tighten. You are screwing into plastic so be careful not to strip the threads.
5. Finish tightening the screw in the bottom bracket hole.
6. Replace the elastic net over the retaining buttons.

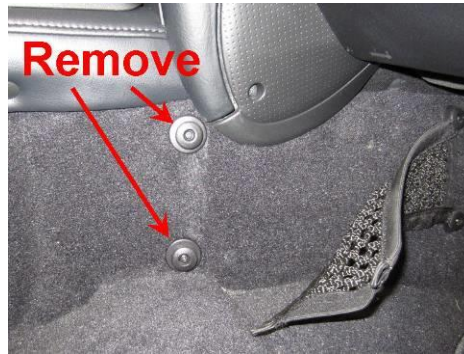

## Installing the top clip on the cup holder

- Position the top clip on the back of the cup holder as shown in the photo and insert the supplied thread-forming screws into the pre-drilled holes using a Philips screw driver. Do not over-tighten the screws – remember you are screwing into plastic.
- OR
- If you are using the bracket with a previously purchased cup holder, drill 4 pilot holes using a 7/64" drill bit at the locations marked by the yellow circles. Then insert the supplied thread-forming screws using a Philips screw driver.

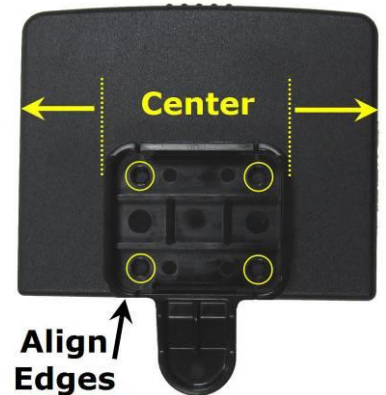

## WARNING – You can break the quick-clip if you don't follow these usage instructions

When attaching the cup holder to the bracket, (1) hold the cup holder at an angle and engage the top part first, then (2) apply pressure at the bottom to snap the clip in place. To remove the cup holder DO NOT SQUEEZE THE RELEASE LEVER, simply pull on the release lever and the clip will come off easily. Squeezing can cause the plastic retaining clip to bend and weaken.

